


Reservoir Tower

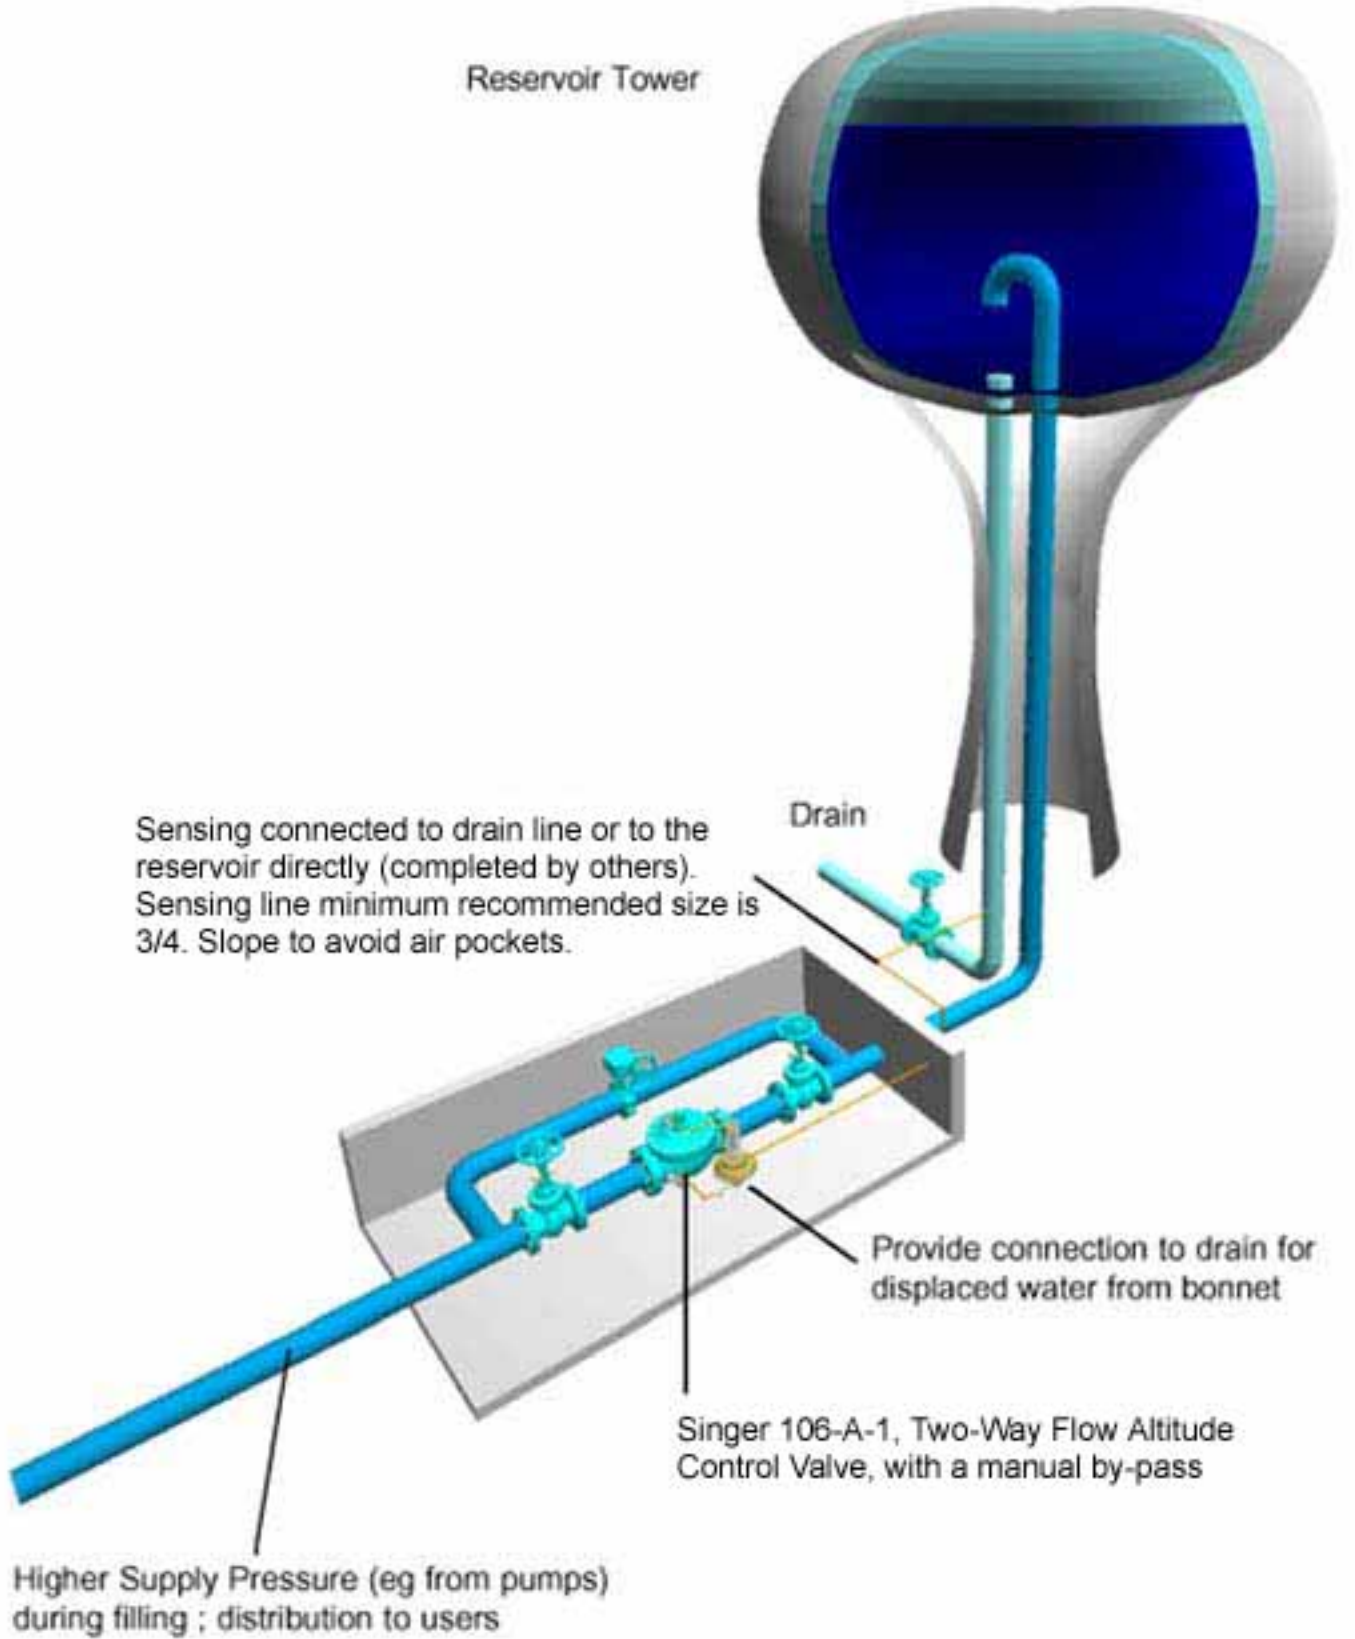

Sensing connected to drain line or to the reservoir directly (completed by others). Sensing line minimum recommended size is 3/4. Slope to avoid air pockets.

Drain

Provide connection to drain for displaced water from bonnet

Singer 106-A-1, Two-Way Flow Altitude Control Valve, with a manual by-pass

Higher Supply Pressure (eg from pumps) during filling ; distribution to users