



## **Model X129**

### **Limit Switch Indicator**

#### **Specifications:**

Select Singer main valve specifications from the main valve section and incorporate the following addendum:

- The Limit Switch Indicator stem shall be pinned to main valve stem on all valves 2-1/2" (65mm) and larger. The Limit Switch Indicator stem shall be threaded to main valve stem on all valves 2" (50mm) and smaller.
- The limit switch shall be a single pole, double throw Honeywell Model OP-AR (other configurations are available).
- The trip point of the limit switch shall be fully adjustable.

**Singer Valve Inc.**

12850 - 87th Avenue • Surrey, British Columbia, Canada V3W 3H9

Tel: 604 594 5404 • Fax: 604 594 8845 • Toll-Free Fax (US & Canada): 1 800 663 7266

E-Mail: [singer@singervalve.com](mailto:singer@singervalve.com) • [singervalve.com](http://singervalve.com)

*An ISO 9001:2000 Registered Company*