

Reservoir Tower

Important User Assured Minimum Pressure

Singer model 106-PR-R or model 206-PR-R

Smaller PR valve for low flow and/or service during maintenance

Throttles main valve if the inlet pressure fails to the assured minimum pressure

Manual by-pass line

Throttles main valve to maintain a constant lower downstream pressure, if the minimum upstream pressure is satisfied

