

Isolation Valve

The Singer Model 106-RPS and 206-RPS pressure relief valve is mounted in a tee off the pressure pipe or header

Singer Model 106-PG-BPC  
Booster Pump Control Valve  
with Internal Drop Check

Booster Pump

Singer Model 106-RPS  
Pressure Relief

Pump Suction Line

